MW82Y

Mikrodalga Fırın

Kullanım Kılavuzu & Pişirme Rehberi

olasılıkları hayal edin

Bu Samsung ürününü satın aldığınız için teşekkürler.
Lütfen ürününüzü aşağıdaki adrese kaydedin

www.samsung.com/register

Planet First 100% Recycled Paper

Bu kılavuz % 100 geri dönüştürülmüş kağıttan hazırlanmıştır.

EEE Yönetmeliğine Uygundur

SAMSUNG

İÇİNDEKİLER

Fırın.....2

Aksesuarlar.....3

Kontrol Paneli.....3

Bu Kılavuzun Kullanımı.....4

Güvenlik Uyarıları.....4

Mikrodalga Fırının Kurulumu.....11

Şüpheli Bir Durum veya Problem Karşısında Yapılması Gerekenler.....11

Saat Ayarı.....12

Güç Seviyeleri.....12

Pişirme/Isıtm.....13

Pişirme İşlemini Durdurma.....13

Pişirme Süresinin Ayarlanması.....13

Otomatik Çözme Özelliğinin Kullanımı.....13

Otomatik Çözme Ayarları.....13

Pişirme Kabı Rehberi.....14

Mikrodalga Fırının Temizlenmesi.....15

Teknik Özellikler.....15

FIRIN

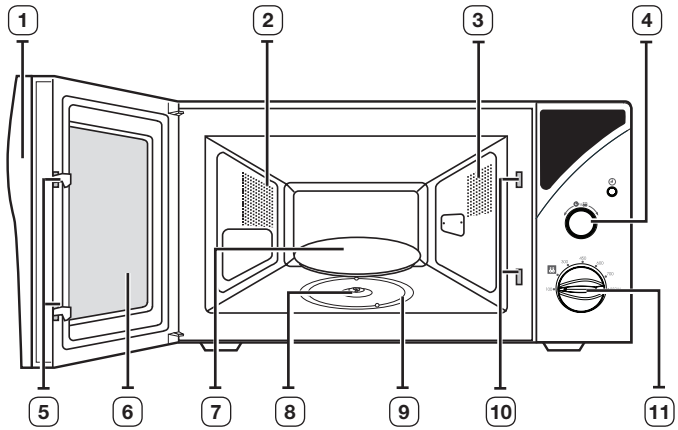

1. KAPAK KOLU
2. HAVALANDIRMA DELIKLERI
3. IŞIK
4. ZAMANLAYICI DÜĞMESİ
5. KAPAK MANDALLARI
6. KAPAK
7. DÖNER TEPSI
8. BAĞLANTI
9. HAREKET MİLİ
10. GÜVENLIK ARAKILIT DELIKLERI
11. DEĞİŞKEN PİŞİRME GÜCÜ KONTROL DÜĞMESİ

AKSESUARLAR

Satın aldığınız modele bağlı olarak, cihazla birlikte değişik şekillerde kullanılabilen birkaç aksesuar verilmiştir.

1. Bağlantý kolu, fırının tabanındaki hareket milinin üstüne yerleştirilmiştir.

Amaç : Bağlantı kolu döner tepsiyi döndürür.

2. Silindir halkasý, fırının ortasına yerleştirilmelidir.



Amaç : Bu halka döner tepsiyi destekler.

3. Döner tepsi, merkezi bağlantı koluna yerleşecek şekilde silindir halkası üstüne yerleştirilmelidir.



Amaç : Döner tepsi ana pişirme yüzeyi olarak işlev görür. Temizleme işlemi için kolayca yerinden çıkarılabilir.

Silindir halkası veya döner tepsi olmadan mikro dalga fırını ÇALIÞTIRMAYIN.

KONTROL PANELİ

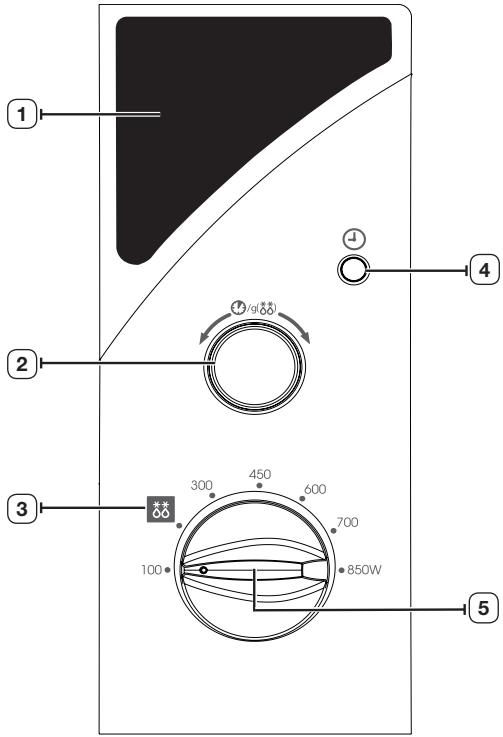

1. EKRAN
2. ZAMANLAYICI DÜĞMESİ
3. OTOMATİK ÇÖZME
4. SAAT AYARLAMA DÜĞMESİ
5. DEĞİŞKEN PİŞİRME GÜCÜ KONTROL DÜĞMESİ

TÜRKÇE

BU KILAVUZUN KULLANILMASI

Bir SAMSUNG mikrodalga fırın satın aldınız. Bu Kullanma Kılavuzu, mikrodalga fırını ile yiyecek pişirme hakkında faydalı bilgiler içermektedir.

- Güvenlik önlemleri
- Aksesuarlar
- Faydalı ipuçları

Kitapçığın içinde fırının ve daha da önemlisi tuşları kolayca bulabilmenizi sağlayacak kontrol panelinin çizimlerini bulacaksınız.

GÜVENLİK BİLGİSİ

- Cihazı çalıştırmadan önce lütfen bu kılavuzu baştan sona okuyun ve ileride tekrar yararlanmak için cihaza yakın, güvenli bir yerde saklayın.
- Bu cihazı sadece bu kılavuzda belirtilen amacına uygun şekilde kullanın. Bu cihaz, çocuklar da dahil olmak üzere, fiziksel, duygusal veya zihinsel engelli kişiler ya da bilgi ve deneyim eksikliği olan kişiler tarafından, gözetim altında olmadıkları müddetçe, güvenlikleri açısından kullanıma uygun değildir. Veya sorumlu bir kişi tarafından kullanıma dair detaylı bilgilendirme yapılmalıdır. Bu kılavuzda yer alan Uyarılar ve Önemli Güvenlik Talimatları olabilecek tüm olası koşul ve durumları kapsamaz. Cihazınızın kurulum, bakım ve çalıştırılması sırasındaki dikkat ve önem sizin sorumluluğunuzdadır.
- Buradaki çalıştırma talimatları çeşitli modelleri kapsadığından mikrodalga fırınınızın özellikleri burada belirtilenden biraz farklı olabilir ve uyarı işaretlerinin tümü uygulanamayabilir. Herhangi bir sorunuz olduğunda lütfen size en yakın servis merkezi ile temasa geçin veya www.samsung.com adresi üzerinden online yardım ve bilgi alın.

Önemli güvenlik sembolleri ve uyarıları

Aşağıdaki semboller kullanım kılavuzundaki metinlerde yer almaktadır.

⚠ DİKKAT	Tehlikeler ve güvenli olmayan uygulamalar **ciddi yaralanmalara veya ölüme** yol açabilir.
⚠ UYARI	Tehlikeler ve güvenli olmayan uygulamalar **yaralanmalara veya mal hasarına** yol açabilir.
⚠ UYARI	Mikrodalga fırını kullanırken yangın, patlama, elektrik şoku veya yaralanma riskini engellemek için burada belirtilen temel güvenlik uyarılarını takip edin.

	KALKIŞMAYIN
	SÖKMEYİN
	DOKUNMAYIN
	Talimatları dikkatlice takip edin
	Fişi prizden çıkartın
	Elektrik çarpması riskini engellemek için cihazın topraklanmış olduğundan emin olun
	Yardım için servis merkezini arayın.
	Not
	Önemli

DİKKAT Kurulum Hakkında Ciddi Dikkat İşaretleri

Mikrodalga fırının kurulumu, üretici tarafından eğitilmiş yetkili bir mikrodalga servis teknisyeni tarafından gerçekleştirilmelidir. Lütfen “Mikrodalga Fırının Kurulumu” bölümüne bakınız.

Güç kablosunu akım değerine uygun olan veya daha yüksek seviyedeki bir prize takın ve prizde sadece bu cihazı kullanın. Fişi prize sıkıca yerleştirin. Uzatma kablosu kullanmayın.

- Aksini yaptığınız ve çoklu priz veya uzatma kablosu ile prizi diğer cihazlarla paylaştığınız takdirde bu elektrik şokuna veya yangına yol açabilir.
- Transformatör kullanmayın. Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Bu cihazın kurulumu yetkili bir servis teknisyeni veya servis hizmeti veren bir firma tarafından gerçekleştirilmelidir.

- Talimatlara uyulmadığı takdirde bu elektrik şokuna, yangına, patlamaya cihazda soruna veya yaralanmalara yol açabilir.

Bu mikrodalga fırın sadece tezgahüstü kullanım içindir. Mikrodalga fırını bir dolabın içine yerleştirmeyin.

Bu cihazı bir ısıtıcının veya alev alabilecek materyalin yanına kurmayın.
Bu cihazı nemli, yağlı, tozlu, doğrudan güneş ışığına veya suya (yağmur damlası gibi) amruz kalabilecek bir yere kurmayın.
Bu cihazı gaz sızıntısı olabilecek bir yere kurmayın.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Bu cihaz yol araçlarına, karavan ve benzeri tipte araçlara kurulmak için uygun değildir.

Bu cihaz doğru şekilde topraklanmalıdır.
Cihazı bir gaz borusuna, plastik su borusuna veya telefon hattına topraklamayın.

- Talimatlara uyulmadığı takdirde bu elektrik şokuna, yangına, patlamaya veya cihazda soruna yol açabilir.
- Cihazı doğru topraklanmamış bir prize asla takmayın ve yerel ve ulusal kodlarla uyumlu olduğundan emin olun.

UYARI Kurulum Hakkında Uyarı İşaretleri

Bu cihaz gerektiğinde fişe kolaylıkla erişilebilecek şekilde yerleştirilmelidir.

- Aksi takdirde bu elektrik şokuna veya elektrik kaçağından kaynaklanan yangına yol açabilir.

Cihazınızı ağırlığını taşıyabilecek, düz ve sert bir zemine yerleştirin.

- Aksi takdirde bu normal olmayan titreşimlere, gürültüye veya cihazda sorun çıkmasına yol açabilir.

Cihazı duvarla arasında yeterli mesafe bırakarak kurun.

- Aksi takdirde bu aşırı ısınmadan dolayı yangına yol açabilir.

Mikrodalganın üst kısmında yeterli miktarda boş alan bırakılması gerekmektedir.

DİKKAT Elektrikle İlgili Ciddi Dikkat İşaretleri

Fiş terminalini ve temas noktalarını kuru bir bez ile düzenli olarak silmek suretiyle toz ve su gibi tüm yabancı maddeleri temizleyin.

- Fişi prizden çekin ve kuru bir bezle temizleyin.
- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Fişi prize, kablo zemine düz gidecek şekilde doğru yönde yerleştirin.

- Eğer fişi prize ters yönde takacak olursanız, kablo içindeki elektrik telleri zarar görebilir ve bu da elektrik şokuna veya yangına yol açabilir.

Fişi prize sıkıca yerleştirin. Hasar görmüş bir fişi, güç kablosunu veya gevşek bir prizi asla kullanmayın.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Güç kablosunu çekmeyin veya aşırı kıvırmayın.
Güç kablosunu bükmeyin.
Güç kablosunu metal bir obje üzerine asmayın, üzerine ağır bir obje koymayın, güç kablosunu objelerin arasına yerleştirin veya güç kablosunu cihazın arkasındaki boşluğa itin.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Fişi çıkartmak için kablodan tutup çekmeyin.

- Fişten tutarak fişi prizden çıkartın.
- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Cihaz ya da kablo hasar gördüğünde size en yakın servis merkezi ile temasa geçin.

UYARI Elektrikle İlgili Uyarılar

Cihaz uzun süre için kullanılmayacaksa veya gök gürültüsü/şimşek çakan fırtınalı bir hava varsa fişi prizden çekin.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

DİKKAT Kullanımla İlgili Ciddi Dikkat İşaretleri

Gaz sızıntısı (propan, LP gazı vb.) durumunda fişe dokunmadan derhal havalandırma yapın. Cihaza veya güç kablosuna dokunmayın.

- Havalandırma fanını kullanmayın.
- Bir kıvılcım, patlamaya veya yangına yol açabilir.

Pişirme sırasında veya pişirmenin hemen ardından, kapağın, ısıtıcının veya fırın içindeki bir parçanın vücudunuzla temas etmemesine dikkat edin.

- Aksi takdirde bu yanıklara yol açabilir.

Kullanım sırasında cihaz ısınacaktır. Bu nedenle fırın içindeki ısıtma ekipmanıyla temas etmekten kaçının.

Isıtma ekipmanını çıkartırken, bu işlem için tasarlanmış uygun ekipmanı kullanmaya dikkat edin. İşlem sırasında cihazla sağlanan güvenlik eldivenlerini giyin ve işlemin ardından ısının yeterli şekilde (ızgara veya kombine pişirme işleminden sonra en az 10dk) düşüp düşmediğine bakın.

Yanma riskinden sakınmak için bir tabağı, fırından çıkarmak için DAIMA eldiven kullanın.

Kapağı açarken, fırından bir kol uzunluğu kadar uzak durun.
Sebep: Çıkan sıcak hava veya buhar yanmalara sebep olabilir.

Sıvıların mikrodalga ile ısıtılması sırasında kaynama noktası gecikebilir, bu nedenle kap dışarı alınırken dikkatli olunması gerekir; Bu durumun yaratacağı sonuçlardan sakınmak için fırın kapandıktan sonra sıcaklığın eşitlenmesi için DAIMA en az 20 saniye bekleyin.
Gerekli ise ısıtma sırasında ve ısıtma sonrasında DAIMA karıştırın.
Yanma durumunda aşağıdaki ILK YARDIM talimatlarını takip edin:

- Yanan yeri en az 10 dakika soğuk suda tutun.
- Temiz ve kuru bir bezle kapatın.
- Yanan yere herhangi bir krem, yağ ya da losyon uygulamayın.
- Doktora başvurun.

Güç kablosu zarar gödüğünde, olası tehlikelerden sakınmak için üretici, yetkili servis merkezi veya eş yeterlilikte bir teknisyen tarafından değiştirilmelidir.

Çocukların fırın ile oynamadıklarına emin olmak için onlara dikkat edin.

Kabuklu veya kaynamış haldeki bütün yumurta mikrodalga fırında ısıtılmamalıdır. Aksi takdirde ısıtma işlemi sona erdikten sonra bile patlayabilir.

DİKKAT: Biberon veya mama kavanozlarının içindeki bebek gıdaları, yanma riskini engellemek için karıştırılmalı veya çalkalanmalı ve tüketilmeden önce sıcaklığı dikkatle kontrol edilmelidir.

DİKKAT: Sadece emniyetli bir şekilde kullanabilecek ve yanlış kullanım sonucu meydana gelebilecek tehlikeleri anlayabilecek talimatları verdikten sonra çocukların kendi başlarına fırını kullanmalarına izin verin.

Bu cihaz, çocuklar veya fiziksel, duygusal veya zihinsel engelli kişiler ya da bilgi ve deneyim eksikliği olan kişiler tarafından, gözetim altında olmadıkları müddetçe, kullanılmamalıdır.

DİKKAT: Kullanım sırasında erişilebilir parçalar ısınabilir. Yanma riskini engellemek için küçük çocuklar fırından uzak tutulmalıdır.

DİKKAT: Olası elektrik şoku riskinden sakınmak için lambayı değiştirmeden önce cihazı kapalı konuma getirdiğinizden emin olun.

Islak ellerle prize dokunmayın.

- Bu, elektrik şokuna yol açabilir.

Mikrodalga fırın çalışırken fişi prizden çekmek suretiyle cihazı kapatmaya kalkışmayın.

- Fişi tekrar prize takmak kıvılcıma ve dolayısıyla elektrik şokuna veya yangına yol açabilir.

Çocuklar için tehlikeli olabileceğinden tüm ambalaj malzemelerini çocukların erişemeyeceği bir yerde saklayın.

- Eğer bir çocuk kafasına torba geçirirse, bu boğulmaya yol açabilir.

Bu cihaz, çocuklar da dahil olmak üzere, fiziksel, duygusal veya zihinsel engelli kişiler ya da bilgi ve deneyim eksikliği olan kişiler tarafından, gözetim altında olmadıkları müddetçe, güvenlikleri açısından kullanıma uygun değildir.

- Aksi takdirde bu, yanmalara, elektrik şokuna veya yaralanmalara yol açabilir.

Bu cihazı pişirmeden farklı bir amaç için ASLA kullanmayın.

- Aksi takdirde bu yangına yol açabilir.

Pişirme işlemi öncesinde kavanoz kapaklarını (biberon, mama, süt şisesi gibi) açıp çıkartın, kabuklu gıdalar veya yemişler gibi yiyeceklerde (yumurta, kestane gibi) bıçakla delik açın.

- Aksi takdirde bunlar patlayabilir ve bu da yanma veya yaralanmalara yol açabilir.

Pişirme işleminin hemen ardından mikrodalga fırının iç kısmına dokunmayın. Zira cihazın içi küçük bir miktar yiyecek ısıtıldıktan veya uzun süreli ısıtma işleminden sonra sıcak olacaktır.

- Aksi takdirde bu yanmalara yol açabilir.

Alüminyum folyo, metal cisim (kap, çatal gibi), altın veya gümüş işlemeli tabaklar kullanmayın.

- Bu, kıvılcıma veya yangına yol açabilir.

Yiyeceği aşırı ısıtmayın.

- Bu, yangına yol açabilir.

Yiyeceği, dergi, gazete gibi kağıtlara sarılı konumda ısıtmayın.

- Bu, yangına yol açabilir.

Yanıcı spray veya maddeleri fırının yakınında bulundurmayın, kullanmayın.

- Bu, yangına veya patlamaya yol açabilir.

Pişirme bölmesindeki yiyecek yanmaya başlarsa mikrodalga fırının kapağını açmayın.

- Kapağı açtığınız takdirde oksijen girişi olacaktır ve bu da yangına yol açabilir.

Fırındaki girişler, çıkışlar ve deliklere ASLA parmaklarınızı, yabancı cisimleri, veya iğne gibi metal objeleri sokmayın. Eğer bu deliklere yabancı bir cisim girerse fişi prizden çıkartın ve ürünü satın aldığınız yerle veya size en yakın servis merkezi ile temasa geçin.

- Aksi takdirde bu, elektrik şokuna veya yaralanmalara yol açabilir.

Kapları ASLA tepesine kadar doldurmayın. Sıvının taşmasını önlemek için üst kısmı alt kısmından daha geniş kapları kullanın.

Dar boyunlu şişeler aşırı ısıtıldıklarında patlayabilir.

Bir biberonu ASLA emziği takılı iken ısıtmayın. Aksi takdirde biberon aşırı ısınmadan dolayı patlayabilir.

Sıcaklık düşene kadar ısıtma devrelerine veya fırın duvarlarının iç tarafına DOKUNMAYIN.

Güç kablosunu veya fişi suyun içine sokmayın ve güç kablosunu sıcak yüzeylerden uzak tutun.

Güç kablosu veya fiş hasar gördüğünde, bu cihazı çalıştırmayın.

Mikrodalga fırını boş iken ÇALIŞTIRMAYIN. Aksi takdirde emniyet açısından güç otomatik olarak kesilecektir.
30 dakika kadar beklettikten sonra, fırını normal bir şekilde kullanabilirsiniz.
En iyisi mikrodalga fırının içinde daima bir bardak su bırakmak olacaktır.
Böylece kazara fırın çalıştırıldığında su mikrodalga enerjisini absorbe eder.

DİKKAT: Kapak veya kapak contaları hasar gördüğünde, yetkili bir kişi tarafından onarılmadan fırın kullanılmamalıdır.

DİKKAT: Patlayabileceklerinden sıvılar ve diğer yiyecekler kapalı kaplarda ısıtılmamalıdır.

Eğer cihaz suya maruz kalırsa, hemen fişini prizden çekin ve size en yakın servis merkezine başvurun.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Eğer cihazdan tuhaf sesler geliyorsa, yanık kokusu veya duman varsa, hemen fişini prizden çekin ve size en yakın servis merkezine başvurun.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Cihazı tamir etmeye, sökmeye veya modifiye etmeye kalkışmayın.

- Yüksek voltaj akımı mevcut olduğu için bu elektrik şokuna veya yangına yol açabilir.
- Elektromanyetik dalgalara maruz kalabilirsiniz.
- Cihazın tamir edilmesi gerektiğinide size en yakın servis merkezine başvurun.

DİKKAT: Herhangi bir bakım veya onarım işleminin ki buna mikrodalga enerjisine karşı koruma sağlayan kapağın çıkartılması da dahil, uzman olmayan bir kişi tarafından yapılması kişiye zarar verebilir.

Cihaz su gibi yabancı maddelere maruz kaldığında hemen fişini prizden çekin ve size en yakın servis merkezine başvurun.

- Aksi takdirde bu elektrik şokuna veya yangına yol açabilir.

Fırından duman tüttüğünü gördüğünüzde, kapağı kapalı tutun ve fırını kapatıp fişini prizden çekin.

UYARI Kullanım İçin Uyarı İşaretleri

Sadece Mikrodalga fırınlarda kullanıma uygun olan gereçleri kullanın;
Herhangi bir metal kap, altın veya gümüş işlemeli tabaklar, şiş, çatal vb. gereçleri KULLANMAYIN. . Kağıt veya plastik paketlerdeki teli çıkartın.
Sebep: Elektrik arkı veya kıvılcım oluşarak fırına zarar verebilir.

Pişme esnasında, atılabilir plastik kaplarda, kağıt veya diğer yanıcı maddelerin içinde ısınan veya pişen yiyeceğe arada bir bakmalısınız;

Az miktardaki yiyecekler içişn daha kısa pişirme veya ısıtma süresi gerekir.
Bunlar için normal zamana göre ayarlama yapılırsa, aşırı ısınma veya yanma olabilir

Çalışma sırasında bir "klik" sesi duyulacaktır (özellikle çözme işlemi sırasında)
Sebep: Elektrik güç çıkışı değiştiğinde, bu ses normaldir.

Küçük çocukların mikrodalga fırın ile oynamalarına veya onu kullanmalarına ASLA izin vermeyin. Fırın kullanılırken küçük çocukları mikrodalga fırının yanından uzak tutun. Çocukların ilgisini çekebilecek nesneler fırının üstüne üstüne konulmamalı veya orada saklanmamalıdır.

Çocukların fırın ile oynamadıklarına emin olmak için onlara dikkat edin.

Isıtma işleminden sonra içecek ve yiyecek çok sıcak olabileceğinden dikkatli olun.

- Özellikle çocuklar için yeterli soğuklukta olup olmadığını kontrol edin.

Su ve benzeri sıvıları ısıtırken dikkatli olun.

- Isıtma sırasında veya sonasında karıştırın.
- Dar boyunlu kaygan bir kap kullanmaktan sakının.
- Isıttıktan en az 30sn sonra kabı mikrodalga fırından çıkartın.
- Aksi takdirde bu kabın içindekilerin taşmasıyla sonuçlanabilir ve yanmalara neden olabilir.

Pişirme işlemi sırasında veya hemen sonasında yiyeceği veya içerdeki herhangi bir kısmı tutmayın.

- Çok sıcak olabileceğinden ve kendinizi yakma ihtimaliniz olduğundan her zaman fırın eldiveni kullanın.
- Seramik tabağı veya çok amaçlı tavayı öne doğru çekerek alırsanız içindeki yiyecek dökülebilir ve bu yanmalara yol açabilir.

Yüzeyde çatlak varsa cihazın güç düğmesini kapalı konuma getirin.

- Aksi takdirde elektrik çarpabilir.

Fırın kapağının camını keskin bir obje ile çizmeyin.

- Bu, camın zarar görmesine ve kırılmasına yol açabilir.

Cihazın üstüne herhangi bir cisim (çamaşır, bez, fırın örtüsü, yanık mum, yanık sigara, tabak, kimyasal maddeler, metal objeler gibi) koymayın.

- Bez gibi bir nesne kapağa sıkışabilir. .
- Bu, elektrik şokuna, yangına, cihazın arızalanmasına veya yaralanmaya yol açabilir.

Cihazı ıslak ellerle çalıştırmayın.

- Bu, elektrik şokuna yol açabilir.

Cihazın yüzeyine böcek ilacı gibi uçucu maddeler sıkmayın.

- Sadece insanlara zararlı olmakla kalmaz, elektrik şokuna, yangına, veya cihazın arızalanmasına yol açabilir.

Cihazın iç kısmına veya kapağına aşırı basınç uygulamayın, darbeye maruz bırakmayın.

- Bu, cihazda bozulmaya veya elektrik kaçağına bağlı olarak yaralanmaya yol açabilir.
- Kapağa asılmak cihazın düşmesini ve kişinin yaralanmasına yol açabilir.
- Kapak zarar görürse, cihazı kullanmayın ve size en yakın servis merkezi ile temasa geçin.

Mikrodalga fırını, lavabo veya cam nesne gibi kırılgan bir eşyanın üzerine yerleştirmeyin.

- Bu, lavabo veya cam eşyanıza zarar verebilir.

Cihazı kapağını kapattıktan sonra kullanın.

- Yiyecek artığı gibi yabancı maddelere maruz kalmışken cihazı kullanmaya devam ederseniz, bu, cihazda arızaya yol açabilir.

Fırından henüz çıkmış yiyeceğin üzerindeki fırın kullanımına uygun kağıdı alırken dikkatli olun.

- Yiyecek sıcaksa içeride birikmiş olan buhar, kağıdı çıkartırken dışarı çıkar ve bu sizi yakabilir.

Fişi prizden çıkartmak için kablosundan tutup çekmeyin. Daima fişi sıkıca tutarak prizden düz bir şekilde çekin.

- Kablonun hasar görmesi, kısa devreye, yangına ve/veya elektrik şokuna yol açabilir.

Pişirme esnasında veya pişirme işleminin hemen ardından kapağı açarken yüzünüzü veya vücudunuzu fırıa yakın tutmayın.

- Çocukların fırına çok fazla yaklaşmamaları için dikkat edin.
- Aksi takdirde sıcaktan dolayı yanma riski olabilir.

Kapağı açarken kapağın üstünde yiyecek veya ağır bir cisim olmamasına dikkat edin.

- Yiyecek veya cisim düşebilir ve bu da yanma veya yaralanmayla sonuçlanabilir.

Pişirme esnasında veya pişirme işleminin hemen ardından kapağı, cihazın iç kısmını veya tabağı üzerine su dökerek hızlı şekilde soğutmaya kalkışmayın.

- Bu, cihazın hasar görmesine yol açabilir.
  Buhar veya su püskürtmek yanmaya veya yaralanmalara yol açabilir.

Cihazlar harici bir zamanlayıcı veya ayrı bir uzaktan kontrol sistemi amacıyla kullanılamazlar.

DİKKAT Temizleme İle İlgili Ciddi Dikkat İşaretleri

Cihazı doğrudan üzerine su sıkarak temizlemeyin.
Cihazı temizlemek için benzen, tiner veya alkol kullanmayın.

- Bunlar, renk solmasına, deformasyona, hasara, elektrik şokuna veya yangına yol açabilir.

Temizlemeden veya bakım yapmadan önce cihazın fişini çekin, kapak ve pişirme bölmesindeki yiyecek artıklarını temizleyin.

- Aksi takdirde elektrik çarpması veya yangına yol açabilir.

Fırın kapağının camını temizlemek için aşındırıcı temizleyiciler veya keskin metal kazıyıcılar kullanmayın. Bunlar yüzeyi çizebilir ve bu da camın parçalanmasına yol açabilir.

Mikrodalga fırını kağıt veya giysi kurutmak için kullanmayın.

Güvenliğiniz için, yüksek basınçlı su veya buhar kullanarak fırını temizlemeyin.

UYARI Temizleme İle İlgili Uyarı İşaretleri

Fırın düzenli olarak temizlenmeli ve yiyecek artıkları ortadan kaldırılmalıdır.

Fırının temiz tutulmaması, yüzeyin bozulmasına ve sonucunda da cihazın performansının düşmesine ve tehlikeli durumlara sebep olabilir.

Cihazı temizlerken (dış/iç) kendinize zarar vermemek için dikkatli olun.

- Cihazın keskin köşeleri yüzünden zarar görebilirsiniz.

Buharlı temizleyici ile cihazı temizlemeye kalkışmayın.

- Bu, çürüme ve paslanmaya yol açabilir.

AŞIRI MIKRODALGA FIRIN ENERJISINE MARUZ KALMAYI ENGELLEME ILE ILGILI ÖNLEMLER

Aşağıdaki güvenlik önlemlerine uyulmaması, zararlı mikrodalga fırın enerjisine maruz kalmanıza neden olabilir.

(a) Hiçbir koşulda, kapak açıkken fırın kullanılmaya çalışılmamalı, ara kilit (kapak mandalları) kurcalanmamalı veya emniyet ara kilit deliklerine her hangi bir obje sokulmamalıdır.

(b) Fırın kapağı ile ön yüz arasına her hangi bir cisim yerleştirmeyin veya conta yüzeyleri üzerinde kir birikmesine izin vermeyin.
İlk kullanımdan sonra ıslak bir bezle temizleyerek ardından yumuşak ve kuru bir bezle silerek kapak ve kapak conta yüzeylerini temiz tutun.

(c) Üretici tarafından eğitilmiş yetkili bir mikrodalga servis teknisyeni tarafından onarılmadan, hasarlı bir fırını kullanmayın. Fırın kapağının düzgün kapanması ve aşağıda belirtilen parçaların hasar görmemiş olması son derece önemlidir:
(1) Kapak
(2) Kapak menteşeleri (kırık veya gevşek)
(3) Kapak contaları ve conta yüzeyleri

(d) Fırın, üretici tarafından eğitilmiş tam yetkili bir mikrodalga servis teknisyeni haricindeki kişiler tarafından ayarlanmamalı veya tamir edilmemelidir.

Bu ürün Grup 2 Sınıf B ISM ekipmanıdır. Grup 2'nin tanımında radyo frekansı enerjisi oluşturulan ve/veya materyal iyileştirmek için elektromanyetik radyasyon formunda kullanılan tüm ISM ekipmanı ve EDM ve kaynak ekipmanı yer alır. Sınıf B ekipmanında, ekipman ev içi kullanım ve ev amaçlı kullanılan yapıları destekleyen düşük voltaj güç kaynağı ağına doğrudan bağlı kurumlarda kullanım için uygundur.

MİKRODALGA FIRININ KURULUMU

Fırını zeminden 85cm yukarıdaki düz bir yüzeye yerleştirin.
Bu yüzey fırının ağırlığını taşıyacak kadar sağlam olmalıdır.

1. Fırını kurarken, yeterli havalandırma için arka ve yanlarda en az 10 cm, üst tarafta 20 cm boşluk bırakın.

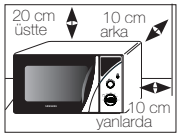

2. Fırının içindeki her türlü ambalaj malzemesini çıkarın. Silindir halkasını ve döner tepsiyi yerleştirin. Döner tepsinin rahat şekilde dönüp dönmediğini kontrol edin.

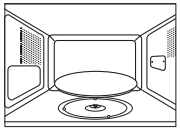

3. Fırın, fiş prize yetişecek şekilde yerleştirilmelidir.

Eğer güç kablosu hasarlı ise, üretici veya üreticiye bağlı servis merkezi tarafında özel bir kablo ile değiştirilmeli veya montajı gerçekleştirilmelidir. Güvenliğiniz için, fişi 3 uçlu, 230 Volt, 50Hz, AC topraklanmış bir prize takın. Güç kablosu hasar görürse, üretici, üreticiye bağlı servis veya yetkili personel tarafından özel bir kablo ile değiştirilmelidir.

Mikrodalga fırını, sıradan bir fırın veya radyatör gibi sıcak ve/veya rutubetli ortamlara YERLEŞTIRMEYİN. Fırının elektrik besleme değerlerine dikkat edilmeli ve kullanılan uzatma kablosu, fırınla birlikte verilen güç kablosu ile aynı standartta olmalıdır.
Mikrodalga fırını ilk defa kullanmadan önce, iç tarafını ve kapak contasını ıslak bir bezle silin.

ŞÜPHELİ BİR DURUM VEYA SORUN KARŞISINDA YAPILACAKLAR

Aşağıdaki sorunlardan biriyle karşılaştığınızda, belirtilen işlemleri yapın.

Bu normaldir.

- Fırının içinde buğulanmanın meydana gelmesi.
- Kapak tarafında ve dış muhafazadan hava üflenmesi
- Kapağın etrafında ve dış muhafazadan ışık yansıması.
- Kapak ve havalandırma delikleri etrafında buhar kaçması.

TIMER (⏲/g(⁂)) (ZAMANLAYICI) düğmesi çevrildiğinde fırın çalışmaya başlamıyor.

- Kapak tamamen kapalı mı?

Yiyecek hiç pişmiyor.

- Zamanlayıcıyı doğru şekilde ayarladınız mı ve/veya **TIMER (⏲/g(⁂)) (ZAMANLAYICI)** düğmesini çevirdiniz mi?
- Kapak kapalı mı?
- Elektrik devresine aşırı yük bindirilmesi, sigortanın atmasına veya devre kesicinin aktif hale gelmesine mi sebep oldu?

Yiyecek ya çok ya da az pişiyor.

- Yiyeceğin türüne uygun pişme süresi ayarlandı mı?
- Uygun bir güç seviyesi mi seçildi?

Fırının içinden kıvılcım veya çatırdama sesi geliyor.

- Metal içeren bir tabak mı kullanıldı?
- Fırının içinde bir çatal veya diğer metal kaplar mı bırakıldı?
- Alüminyum folyo, iç duvarlara çok mu yakın?

Fırın, radyo veya televizyon yayınında parazite neden oluyor.

- Fırın çalışırken, radyo ve televizyon yayınında hafif parazit olabilir. Bu normaldir. Sorunu çözmek için fırını televizyon, radyo ve antenlerden uzağa yerleştirin.
- Fırının mikro işlemcisi tarafından parazit algılandığında, gösterge sıfırlanabilir. Bu problemi çözmek için fişi prizden çekin ve tekrar takın. Zamanı sıfırlayın.

Eğer yukarıdaki rehber sorunu çözmezse, yerel satıcınıza veya SAMSUNG satış sonrası servisine başvurun.

SAAT AYARI

Mikrodalga fırında dahili bir saat vardır. Cihazın fişi prize takıldığında , ":0", "88:88" veya "12:00" otomatik olarak göstergede görüntülenir.
Lütfen geçerli saati ayarlayınız. Zaman, 24 veya 12 saatlik düzende görüntülenebilir. Aşağıdaki durumlarda saati ayarlamalısınız:

- Mikrodalga fırını ilk kurduğunuzda
- Elektrik kesintisinden sonra

Kış ve yaz saat ayarlamasına geçişlerde saati ayarlamayı unutmayın

1. Saati aşağıdaki sistemde görüntülemek için... **(🕘) tuşuna aşağıda gösterildiği gibi basın...**

24-saatlik sistem — Bir kez
12-saatlik sistem — Iki kez



2. Saati ayarlamak için **TIMER** (⏱/g(✱✱)) **(ZAMANLAYICI)** düğmesini çevirin.

3. (🕘) Tuşuna basın.



4. Dakikayı ayarlamak için **TIMER** (⏱/g(✱✱)) **(ZAMANLAYICI)** düğmesini çevirin.

5. (🕘) Tuşuna basın.



GÜÇ SEVİYELERİ

Aşağıdaki seviyelerden birisini seçebilirsiniz.

Güç Seviyesi	Çıkış
YÜKSEK	850 W
ISITMA	700 W
ORTA YÜKSEK	600 W
ORTA	450 W
ORTA DÜŞÜK	300 W
OTOMATİK ÇÖZME (✱✱)	180 W
DÜŞÜK/ SICAK TUTMA	100 W

Yüksek güç seviyesini seçtiğinizde, pişme süresi kısalmalıdır.

Düşük güç seviyesini seçtiğinizde, pişme süresi artmalıdır.

PİŞİME/ISITMA

Aşağıdakiler, yiyeceği nasıl pişireceğinizi/ısıtacağınızı gösterir.
Fırını bırakıp gitmeden önce DAIMA pişme ayarlarını kontrol edin.
Yiyeceği döner tepsinin ortasına yerleştirin ve kapağı kapatın.

1. Güç seviyesini maksimuma getirmek için **COOKING POWER CONTROL (PİŞİRME GÜCÜ KONTROL)** düğmesini çevirin.
(MAKSİMUM GÜÇ : 850 W)



2. **TIMER** (⏱/g(⁂)) (ZAMANLAYICI) düğmesini çevirerek zamanı ayarlayın.

Sonuç: Fırının ışığı yanar ve döner tabla dönmeye başlar

1) Yiyecek pişirilmeye başlar ve pişme tamamlandığında, fırın dört kez öter.
2) Hatırlatma sinyali 3 kez ötecektir (her dakika başında)
3) Geçerli süre tekrar görüntülenir.

Boş iken mikrodalga fırını ASLA çalıştırmayın.

Pişirme işlemi esnasında güç seviyesini değiştirmek için **COOKING POWER CONTROL (PİŞİRME GÜCÜ KONTROL)** düğmesini çevirin.

PİŞİRME İŞLEMİNİN DURDURULMASI

Yiyeceği kontrol etmek için istediğiniz an pişirme işlemini durdurabilirsiniz.

1. Geçici olarak durdurmak için;
Kapağı açın.



Sonuç: Pişirme işlemi durur. Pişirme işlemine devam etmek için kapağı kapatın.

2. Tamamen durdurmak için;
TIMER (⏱/g(⁂)) (ZAMANLAYICI) düğmesini sola çevirin.
": 0" ibaresi görüntülenecektir.



PİŞİRME SÜRESİNİN AYARLANMASI

Kalan pişirme üresini ayarlamak için **TIMER** (⏱/g(⁂)) (ZAMANLAYICI) düğmesini çevirin.
Pişirme işlemi sırasında pişirme süresini arttırmak için kontrol düğmesini sağa çevirin.

OTOMATİK ÇÖZME ÖZELLİĞİNİN KULLANILMASI

Otomatik Çözme Özelliği et, kümes hayvanları ve balığı çözmenizi sağlar.
İlk önce, donmuş yiyeceği döner tablanın ortasına koyun ve kapağı kapatın.

1. **COOKING POWER CONTROL (PİŞİRME GÜCÜ KONTROL)** düğmesini **Auto Defrost** (⁂) (Otomatik Çözme) sembolüne çevirin.



2. **TIMER** (⏱/g(⁂)) (ZAMANLAYICI) düğmesini çevirerek uygun ağırlığı seçin.

Sonuç: Fırının ışığı yanar ve döner tabla dönmeye başlar

1) Yiyecek pişirilmeye başlar ve pişme işlemi tamamlandığında, fırın dört kez öter.
2) Hatırlatma sinyali 3 kez ötecektir (her dakika başında)
3) Geçerli süre tekrar görüntülenir.

Sadece mikrodalga için güvenli olan tabakları kullanın.

OTOMATİK ÇÖZME AYARLARI

Çözme işleminden önce, bütün ambalaj malzemelerini çıkarın.
Donmuş yiyeceği döner tablanın ortasına koyun. Fırın sinyal verdiğinde yiyeceği çevirin.
Otomatik çözme işlemi bittikten sonra ilgili bekleme sürelerine uygun hareket edin.

Yiyecek	Porsiyon	Bekleme Süresi	Tavsiyeler
Et	200-1500 g	20-60 dk	Kenarları alüminyum folyo ile kapatın. Fırın sinyal verdiğinde parçaları çevirin.
Kümes Hay.	200-1500 g	20-60 dk	
Balık	200-1500 g	20-50 dk	

PİŞİRME KABI REHBERİ

Yiyecekleri mikrodalga fırında pişirmek için, mikrodalgalar yansımadan veya kullanılan kap tarafından emilmeden yiyeceğe nüfuz etmelidir. Bu yüzden, pişirme kabı seçerken dikkatli olunmalıdır. Eğer pişirme kabı mikrodalga için güvenli ise, endişelenmenize gerek yoktur. Aşağıdaki tabloda değişik pişirme kaplarını listelenmekte ve bunların mikrodalga fırında nasıl kullanılmaları gerektiğini açıklanmaktadır.

Pişirme Kabı	Mikrodalga-Güvenliği	Yorumlar
Alüminyum folyo	✓✗	Bazı kısımları aşırı pişirmeye karşı korumak için, az miktarlarda kullanılabilir. Folyo, fırının duvarlarına çok yaklaştırıldığında veya çok fazla kullanıldığında kıvılcımlar oluşabilir.
Kızartma tabağı	✓	Ön ısıtma işlemini sekiz dakikadan fazla sürdürmeyin.
Porselen ve çömlek	✓	Metal süsleme uygulanmadığı takdirde porselen, fırınlanmış çömlek ve kemik porselen genellikle uygundur.
Atılabilir polyester mukavva tabaklar	✓	Bazı donmuş yiyecekler, bu tabaklarda ambalajlanır.
Hazır gıda ambalajı		
• Polistiren kaplar	✓	Yiyecekleri ısıtmak için kullanılabilir. Aşırı ısıtma, polistiren maddesinin erimesine sebep olabilir.
• Kağıt ambalaj veya gazete	✗	Yangına sebep olabilir.
• Dönüştürülebilir kağıt veya metal süs	✗	Kıvılcımlara sebep olabilir.
Cam Eşya		
• Fırından masaya özellikli cam kaplar	✓	Metal süsleme uygulanmadığı takdirde kullanılabilir.
• İnce cam eşyalar	✓	Yiyecekleri veya sıvıları ısıtmak için kullanılabilir. Aniden ısıtıldığında ince cam kırılabilir veya çatlayabilir.
• Cam kavanozlar	✓	Kapağı açmalısınız. Sadece ısıtma için uygundur.
Metal		
• Tabaklar	✗	Kıvılcımlara veya yangına sebep olabilir.
• Buzluk poşet/kap bağları	✗	
Kağıt		
• Tabak, fincan, peçete ve mutfak kağıdı	✓	Kısa pişirme süreleri ve ısıtma için. Aynı zamanda fazla nemi de emer.
• Dönüştürülebilir kağıt	✗	Kıvılcımlara sebep olabilir.
Plastik		
• Kaplar	✓	Özellikle, ısıya karşı yüksek dirençli termoplastik ise. Bazı diğer plastik kaplar, yüksek sıcaklıklarda bükülebilir veya rengi bozulabilir. Melamin plastik kullanmayın.
• Streç Film	✓	Nemi muhafaza etmek için kullanılabilir. Yiyeceğe temas etmemelidir. Sıcak buhar çıkacağından, filmi kaldırırken dikkatli olun.
• Buzluk poşeti	✓✗	Sadece kaynatılabilir/fırında kullanılmaya uygun ise kullanılabilir. Hava geçirmelidir. Gerekirse, bir çatalla delin.
Yağlı kağıt	✓	Nemi muhafaza etmek ve dağılmaları önlemek için kullanılabilir.

✓ :Tavsiye edilir
✓✗:Dikkatli kullanın
✗ :Güvenli değil

MİKRODALGA FIRININ TEMİZLENMESİ

Yağ ve yemek atıklarının birikmesini önlemek için, mikrodalga fırının aşağıdaki parçaları düzenli olarak temizlenmelidir:

- ***İç ve dış yüzeyler***
- ***Kapak ve kapak menteşeleri***
- ***Döner tepsi ve silindir halkaları***

HER ZAMAN kapak menteşelerinin temiz olduğundan ve kapağın düzgün kapandığından emin olun.

Fırının temiz tutulmaması, yüzeyin bozulmasına ve sonucunda da cihazın performansının düşmesine ve tehlikeli durumlara sebep olabilir.

1. Dış yüzeyleri sıcak, sabunlu su ve yumuşak bir bezle temizleyin. Durulayıp kurutun.
2. İç yüzeylerdeki veya silindir halkası üzerindeki lekeleri veya kirleri sabunlu bir bezle temizleyin. Durulayıp kurutun.
3. Yapışmış yemek atıklarını yumuşatmak ve kokuları gidermek için, döner tepsinin üstüne bir fincan inceltilmiş limon suyu yerleştirin ve maksimum güçte 10 dakika kadar ısıtın.
4. Gerekirse, bulaşık makinesinde yıkanmaya uygun tepsiyi yıkayın.

Havalandırma deliklerine su **DÖKMEYİN**. **KESİNLİKLE** aşındırıcı veya kimyasal maddeler kullanmayın. Kapak menteşelerini temizlerken aşağıdaki durumlara dikkat edin:

- Atıkların birikmediğinden emin olun.
- Kapağın düzgün kapanmasını engellemediğinden emin olun.

Mikrodalga fırının içini her kullanımın ardından yumuşak bir deterjan solüsyonuyla **temizleyin**. Yaralanma ihtimaline karşı fırını soğuduktan sonra temizleyin.

TEKNİK ÖZELLİKLER

SAMSUNG, ürünlerini geliştirmek için her zaman çalışmaktadır. Bu nedenle teknik özellikler ve bu kullanım kılavuzu, haber verilmeden değiştirilebilir.

Model	MW82Y
Güç Kaynağı	230 V ~ 50 Hz
Güç Tüketimi Mikrodalga	 1250 W
Çıkış Gücü	100 W / 850 W (IEC-705)
Çalışma Frekansı	2450 MHz
Magnetron	OM75P(31)
Soğutma Yöntemi	Soğutma Fan Motoru
Ebat (W x D x H) Dış Fırın İçi	 489 x 275 x 374 mm 330 x 211 x 329 mm
Hacim	23 Litre
Ağırlık Net	 13.5 kg yaklaşık

KULLANIM ÖMRÜ: 10 YILDIR

Üretici:

SAMSUNG ELECTRONICS (M) SDN.BHD.
(CO. NO. 186991-D)
Lot 2, Lebuh 2, North Klang Straits,
Area 21, Industrial Park,
42000 Port Klang, Selangor Darul Ehsan, Malaysia.
Tel: 03-31761068(12 Lines) Fax: 03-31763461

İthalatçı Firma

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD.ŞTİ.
Flatofis İstanbul İş Merkezi,Otakçılar Cad. Bina No: 78, Kat:3,
No: B3, 34050, Eyüp, İstanbul /Türkiye

LVD:

NEMKO
300-2, Osan-ri, Mohyun-Myun, Yongin-City,
Kyunki-do, Korea,
TEL: +82 31 322 2333
FAX: +82 31 322 2332

EMC:

NEMKO
300-2, Osan-ri, Mohyun-Myun, Yongin-City,
Kyunki-do, Korea,
TEL: +82 31 322 2333
FAX: +82 31 322 2332

SORULAR VE YORUMLAR

ÜLKE	AŞAĞIDAKİ TELEFON NUMARALARIMIZI ARAYIN	VEYA WEB SAYFAMIZI ZİYARET EDİN
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	
JORDAN	800-22273	
Morocco	080 100 2255	
Oman	800-SAMSUNG (726-7864)	
Saudi Arabia	9200-21230	
Turkey	444 77 11	
U.A.E	800-SAMSUNG (726-7864)	

Code No.: DE68-03488H-01

MW82Y

Microwave Oven

Owner's Instructions & Cooking Guide

imagine the possibilities

Thank you for purchasing this Samsung product.
Please register your product at

www.samsung.com/register

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

EEE Yönetmeliğine Uygundur

SAMSUNG

ENGLISH

CONTENTS

Oven 2
Accessories 3
Control panel 3
Using this instruction booklet 4
Safety information 4
Installing your microwave oven 11
What to Do if You are in Doubt or Have a Problem 11
Setting the time 12
Power levels 12
Cooking / Reheating 13
Stopping the cooking 13
Adjusting the Cooking Time 13
Using the Auto Defrosting Feature 13
Auto Defrost Settings 13
Cookware guide 14
Cleaning your microwave oven 15
Technical specifications 15

OVEN

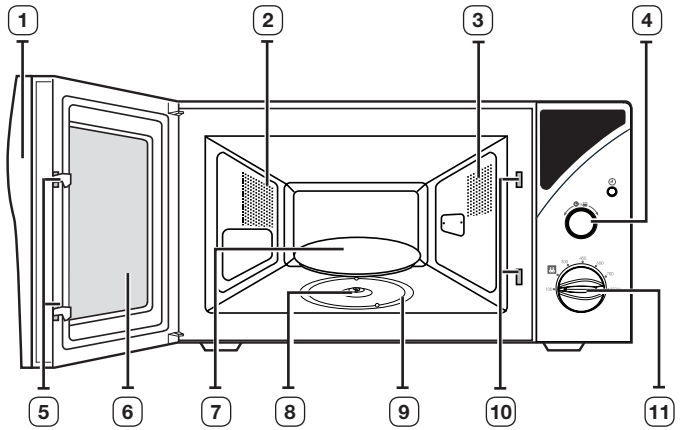

1. DOOR HANDLE
2. VENTILATION HOLES
3. LIGHT
4. TIME/WEIGHT DIAL
5. DOOR LATCHES
6. DOOR
7. TURNTABLE
8. COUPLER
9. ROLLER RING
10. SAFETY INTERLOCK HOLES
11. VARIABLE COOKING POWER CONTROL KNOB

MW82Y_AND_EN.indd 2 2010-11-08 9:46:36

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

1. **Coupler**, already placed over the motor shaft in the base of the oven.

Purpose : The coupler rotates the turntable.

2. **Roller ring**, to be placed in the centre of the oven.



Purpose : The roller ring supports the turntable.

3. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.



Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.

DO NOT operate the microwave oven without the roller ring and turntable.

CONTROL PANEL

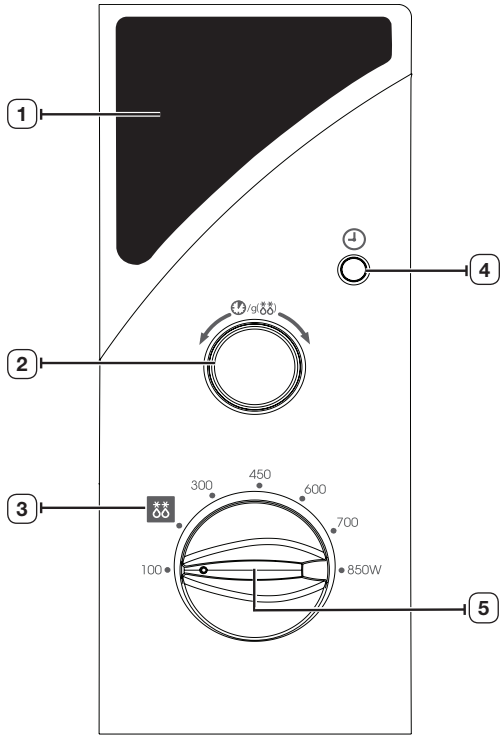

1. DISPLAY
2. TIME/WEIGHT DIAL
3. AUTO DEFROST
4. CLOCK SETTING BUTTON
5. VARIABLE COOKING POWER CONTROL KNOB

ENGLISH

MW82Y_AND_EN.indd 3 2010-11-08 9:46:37

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

SAFETY INFORMATION

- Before operating the appliance, please read this manual thoroughly and retain it at a safe place near the appliance for your future reference.
- Use this appliance only for its intended purpose as described in this instruction manual. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

Important safety symbols and precautions.

The following symbols are used in the text of this Owner's Manual:

⚠ WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your microwave oven, follow these basic safety precaution

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.
	Note
	Important

MW82Y_AND_EN.indd 4 2010-11-08 9:46:37

WARNING Severe warning signs for installation

The installation of this appliance must be performed by a qualified microwave service technician trained by the manufacturer. Please see the section “Installing your Microwave Oven”.

Plug the power cord into the proper wall socket or higher and use the socket for this appliance only. Plug the power plug into the wall socket firmly. In addition, do not use an extension cord.

- Failure to do so and sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).
Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

CAUTION Caution signs for installation

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, noise, or problems with the product.

Install the appliance while maintaining the proper distance from the wall.

- Failure to do so may result in fire due to overheating.

The minimum height of free space necessary above the top surface of the oven.

WARNING Severe warning signs for electric

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

MW82Y_AND_EN.indd 5 2010-11-08 9:46:38

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

When the appliance or the cord is damaged, contact your nearest service centre.

CAUTION Caution signs for electric

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WARNING Severe warning signs for using

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Take care that the door, heater or any of the other parts do not come into contact with the body while cooking or just after cooking.

- Failure to do so may result in burns.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

When moving heating elements, make sure to use the equipment designed to move heating element while wearing safety gloves provided with the product, and see if temperature drops sufficiently (at least 10 minutes after grill or combination cooking operation) after operation.

ALWAYS use oven gloves when removing a dish from the oven to avoid unintentional burn.

Stand at arms length from the oven when opening the door.
Reason : The hot air or steam released may cause scalding.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions:

- Immerse the scalded area in cold water for at least 10 minutes.
- Cover with a clean, dry dressing.
- Do not apply any creams, oils or lotions.
- Contact a doctor

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children should be supervised to ensure that they do not play with the appliance.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.

WARNING : The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

WARNING : Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

MW82Y_AND_EN.indd 6 2010-11-08 9:46:38

Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

WARNING : Accessible parts may become hot during use. To avoid burns young children should be kept away.

WARNING : Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Failing to do so may result in electric shock, burns or injury.

Never use this appliance for purposes other than cooking.

- Failure to do so may result in fire.

Open sealed containers (baby bottles, milk bottles, etc.) and make a hole in food items such as shells or nuts (eggs, chestnuts, etc) with a knife, before cooking them.

- Failure to do so may result in burns or injury due to the item bursting.

Do not touch the inside of the appliance immediately after cooking, because the inside of the appliance is hot after being heated for a long time or heating a small amount of food.

- Failure to do so may result in burns.

Do not use aluminium foil, metal objects (such as containers, forks, etc.) or containers with golden or silver trims.

- This may result in sparks or fire.

Do not over-heat food.

- This may result in fire.

Do not heat food wrapped in paper such as magazines or newspaper.

- This may result in fire.

Do not use or place inflammable sprays or objects near the oven.

- This may result in fire or an explosion.

Do not open the door when the food in the cooking compartment is burning.

- If you open the door, an inflow of oxygen occurs and this may result in fire.

Do not insert fingers, foreign substances or metal objects such as pins or needles into the inlet, outlet and holes. If foreign substances are inserted into any of these holes, unplug the power plug from the wall socket and contact your product provider or nearest service centre.

- Failure to do so may result in electric shock or injury.

NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.

NEVER heat a babys bottle with the teat on, as the bottle may explode if overheated.

DO NOT touch heating elements or interior oven walls until the oven be cooled down.

MW82Y_AND_EN.indd 7 2010-11-08 9:46:38

Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.

Do not operate this appliance if it has a damaged power cable or plug.

DO NOT operate the microwave oven when it is empty. The power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes. It is best to leave a glass of water inside the oven at all times. The water will absorb the microwaves energy if the oven accidently started.

WARNING : If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING : Liquids and other foods must not be heated in sealed containers since they are liable to explode.

If the appliance is flooded cut the power immediately and please contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Since a high voltage current enters the product chassis, it may result in electric shock or fire.
- You may be exposed to electromagnetic waves.
- When repairing the appliance is required, contact your nearest service centre.

WARNING : It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;

CAUTION Caution signs for using

Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags.
Reason : Electric arcing or sparking may occur and may damage the oven.

When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;

Small amounts of food require shorter cooking or heating time.
If normal times are allowed they may overheat and burn.

You may notice a Clicking sound during operation (especially when the oven is defrosting).
Reason : This sound is normal when the electrical power output is changing.

Young children should NEVER be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.

Children should be supervised to ensure that they do not play with the appliance.

MW82Y_AND_EN.indd 8 2010-11-08 9:46:38

Take care as beverages or food may be very hot after heating.

- Especially when feeding a child, check that it has cooled sufficiently.

Take care when heating liquids such as water or other beverages.

- Make sure to stir during or after cooking.
- Avoid using a slippery container with a narrow neck.
- Remove the container at least 30 seconds after heating.
- Failing to do so may result in an abrupt overflow of the contents and cause burns.

Do not hold food or any part there of during or immediately after cooking.

- Use cooking gloves because it may be very hot and you could burn yourself.
- If you pull the ceramic dish or well-being multi-purpose pan forwards, food may spill and this may result in burns.

When the surface is cracked, turn the power switch of the appliance off.

- Failure to do so may result in electric shock.

Do not scratch the glass of the oven door with a sharp object.

- This may result in the glass being damaged or broken.

Do not stand on top of the appliance or place objects (such as laundry, oven cover, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- Items, such as a cloth, may be caught in the door.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not apply excessive pressure or impact to the door or to the inside of the appliance.

- This may result in deformation to the product or injury due to electric wave leakage.
- Hanging onto the door may result in the product falling and causing injury.
- If the door is damaged, do not use the appliance and contact your nearest service centre.

Do not place the appliance over a fragile object such as a sink or glass object.

- This may result in damage to the sink or glass object.

Use the appliance only after closing the door.

- If you use the appliance when it is contaminated by foreign substances such as food waste, it may result in problems with the appliance.

Take care when removing the wrapping from food that has just been taken out of the appliance.

- If the food is hot, hot steam may be emitted abruptly when removing the wrapping and you may burn yourself.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

Do not put your face or body close to the appliance while cooking or when opening the door just after cooking.

- Take care that children do not come close to the appliance.
- Failure to do so may result in burns from the heat.

Do not place food or heavy objects over the door when opening the door.

- The food or object may fall and this may result in burns or injury.

Do not abruptly cool the door, the inside of the appliance, or the dish by pouring water over it during or just after cooking.

- This may result in damage to the appliance. The steam or water spray may result in burns or injury.

MW82Y_AND_EN.indd 9 2010-11-08 9:46:38

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

WARNING Severe warning signs for cleaning

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket and remove food waste from the door and cooking compartment.

- Failure to do so may result in electric shock or fire.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Do not use your microwave oven to dry papers or clothes.

For your safety, do not use high-pressure water cleaners or steam jet cleaners.

CAUTION Caution signs for cleaning

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

Take care not to hurt yourself when cleaning the appliance (external/ internal).

- You may hurt yourself on the sharp edges of the appliance.

Do not clean the appliance with a steam cleaner.

- This may result in corrosion.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
(1) Door (bent)
(2) Door hinges (broken or loose)
(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.
For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

MW82Y_AND_EN.indd 10 2010-11-08 9:46:38

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

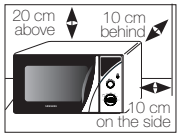

2. Remove all packing materials inside the oven.
   Install the roller ring and turntable.
   Check that the turntable rotates freely.

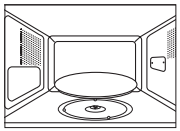

3. This microwave oven has to be positioned so that plug is accessible.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
For your personal safety, plug the cable into a 3-pin, 230 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.

Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you turn the TIME/WEIGHT (/g) dial.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly and/or turn the **TIME/WEIGHT (/g)** dial.
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

MW82Y_AND_EN.indd 11 2010-11-08 9:46:39

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, ":0", "88:88" or "12:00" is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24- hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Do not forget to reset the clock when you switch to and from summer and winter time.

1. **To display the time in the...** / **Then press the button (🕘)..**

   24-hour notation — Once
   12-hour notation — Twice



2. Turn the **TIME/WEIGHT** (⏲/g/⚖) dial to set hour.

3. Press the (🕘) button.



4. Turn the **TIME/WEIGHT** (⏲/g/⚖) dial to set minute.

5. Press the (🕘) button.



POWER LEVELS

You can choose among the power levels below.

Power Level	Output
HIGH	850 W
REHEAT	700 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
AUTO DEFROST (⚖)	180 W
LOW / KEEP WARM	100 W

If you select higher power level, the cooking time must be decreased.

If you select lower power level, the cooking time must be increased.

MW82Y_AND_EN.indd 12 2010-11-08 9:46:40

COOKING / REHEATING

The following procedure explains how to cook or reheat food.
ALWAYS check your cooking settings before leaving the oven unattended.
First, place the food in the centre of the turntable. Then, close the door.

1. Set the power level to maximum by turning **COOKING POWER CONTROL** knob.
   (MAXIMUM POWER : 850 W)



2. Set the time by turning **TIMEWEIGHT** (⏲/g(⁂)) dial.

   Result : The oven light comes on and the turntable starts rotating.
   1) Cooking starts and when it has finished the oven beeps four times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

Never switch the microwave oven on when it is empty.

You can change the power level during cooking by turning the **COOKING POWER CONTROL** knob.

STOPPING THE COOKING

You can stop cooking at any time to check the food.

1. To stop temporarily;
   Open the door.



   Result : Cooking stops. To resume cooking, close the door.

2. To stop completely;
   Turn the **TIMEWEIGHT** (⏲/g(⁂)) dial to the left.
   ": 0" will be displayed.

ADJUSTING THE COOKING TIME

Adjust the remaining cooking time by rotating the **TIMEWEIGHT** (⏲/g(⁂)) dial.
Turn the dial right to increase the cooking time of your food during the cooking process.

USING THE AUTO DEFROSTING FEATURE

The Auto Defrost feature enables you to defrost meat, poultry, fish.
First, place the frozen food in the centre of the turntable and close the door.

1. Turn the **COOKING POWER CONTROL** knob to the **Auto Defrost** (⁂) symbol.



2. Turn the **TIMEWEIGHT** (⏲/g(⁂)) dial to select the appropriate weight.

   Result : The oven light comes on and the turntable starts rotating.
   1) Cooking starts and when it has finished the oven beeps four times.
   2) The end reminder signal will beep 3 times (once every minute).
   3) The current time is displayed again.

Use only recipients that are microwave-safe.

AUTO DEFROST SETTINGS

Remove all kinds of packaging material before defrosting.
Place the frozen foods on a turntable. Turn the food over when the oven beeps.Keep the corresponding standing time after Auto Defrosting has finished.

Food	Portion	Standing Time	Recommendation
Meat	200-1500 g	20-60 min	Shield the edges with aluminium foil. Turn the food over when the oven beeps.
Poultry	200-1500 g	20-60 min	
Fish	200-1500 g	20-50 min	

ENGLISH

MW82Y_AND_EN.indd 13 2010-11-08 9:46:40

COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminum foil	▯▯	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	▯	Do not preheat for more than eight minutes.
China and earthenware	▯	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	▯	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	▯	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	▯	May catch fire.
• Recycled paper or metal trims	▯	May cause arcing.
Glassware		
• Oven-to-table ware	▯	Can be used, unless decorated with a metal trim.
• Fine glassware	▯	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	▯	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	▯	May cause arcing or fire.
• Freezer bag twist ties	▯	
Paper		
• Plates, cups, napkins and Kitchen paper	▯	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	▯	May cause arcing.
Plastic		
• Containers	▯	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	▯	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	▯▯	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	▯	Can be used to retain moisture and prevent spattering.

▯ **: Recommended**
▯▯ **: Use Caution**
▯ **: Unsafe**

MW82Y_AND_EN.indd 14 2010-11-08 ▯▯ 9:46:41

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings

ALWAYS ensure that the door seals are clean and the door closes properly.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

DO NOT spill water in the vents. NEVER use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

Clean the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MW82N
Power source	230 V ~ 50 Hz
Power consumption Microwave	 1250 W
Output power	100 W / 850 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	 489 x 275 x 374 mm 330 x 211 x 329 mm
Volume	23 liter
Weight Net	 13.5 kg approx

MW82Y_AND_EN.indd 15 2010-11-08 9:46:41

life time is 10years

Manufacturer: SAMSUNG ELECTRONICS (M) SDN.BHD.
(CO. NO. 186991-D)
Lot 2, Lebuh 2, North Klang Straits,
Area 21, Industrial Park,
42000 Port Klang, Selangor Darul Ehsan, Malaysia.
Tel: 03-31761068(12 Lines) Fax: 03-31763461

İthalatçı Firma
SAMSUNG
SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD.ŞTİ.
Flatofis İstanbul İş Merkezi,Otakçılar Cad. Bina No: 78, Kat:3,
No: B3, 34050, Eyüp, İstanbul /Türkiye

LVD:
NEMKO
300-2, Osan-ri, Mohyun-Myun, Yongin-City,
Kyunki-do, Korea,
TEL: +82 31 322 2333
FAX: +82 31 322 2332

EMC:
NEMKO
300-2, Osan-ri, Mohyun-Myun, Yongin-City,
Kyunki-do, Korea,
TEL: +82 31 322 2333
FAX: +82 31 322 2332

SORULAR VE YORUMLAR

ÜLKE	AŞAĞIDAKİ TELEFON NUMARALARIMIZI ARAYIN	VEYA WEB SAYFAMIZI ZİYARET EDİN
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	
JORDAN	800-22273	
Morocco	080 100 2255	
Oman	800-SAMSUNG (726-7864)	
Saudi Arabia	9200-21230	
Turkey	444 77 11	
U.A.E	800-SAMSUNG (726-7864)	

Code No.: DE68-03488H-01